



67412035 Rev. 04-06/2024

Connections SEA CLOUD UNI IOT




PHASE 1

1.1


MAKE CONNECTIONS BETWEEN SEACLOUD UNI 10T AND THE ADAPTEUR MODULE




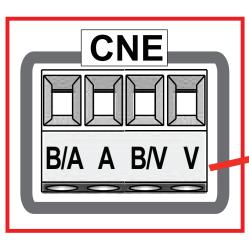

B/A= WHITE/ARANGE A= ARANGE B/V = WHITE/GREEN V=GREEN

FOR CONNECTIONS
TO ETHERNET CABLE
ON TERMINAL BLOCK
CNE OF
SEACLOUD.

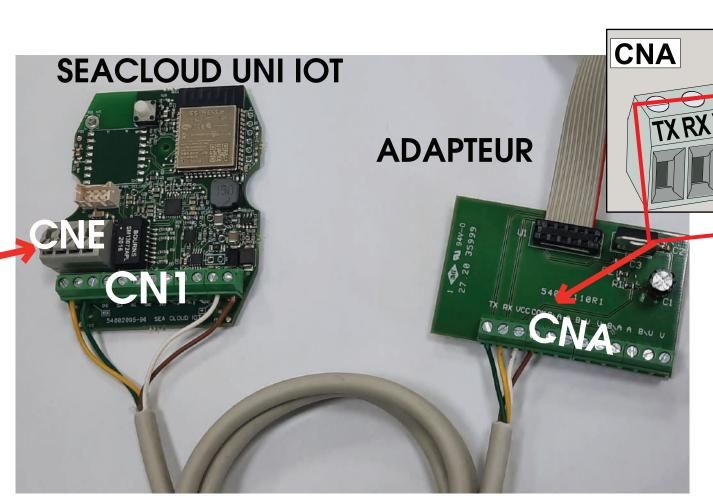


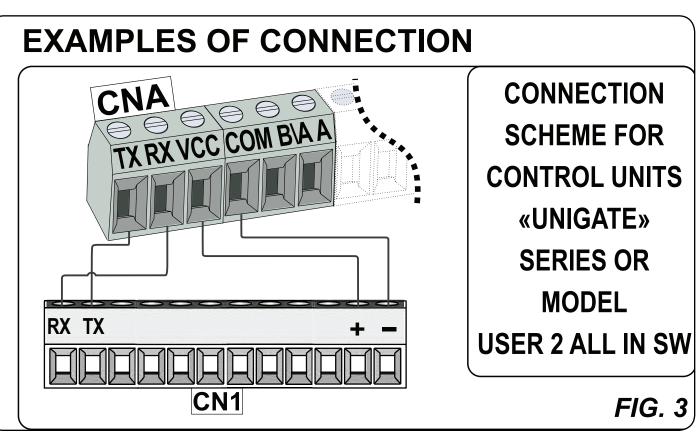


1 2

CONNECT ADAPTEUR AND CONTROL BOARD VIA SERIAL CABLE SU "JOLLY"

CONTROL BOARD

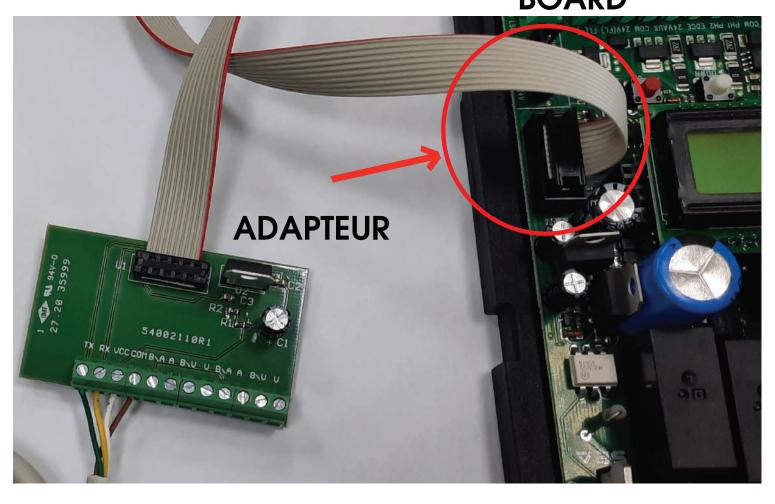

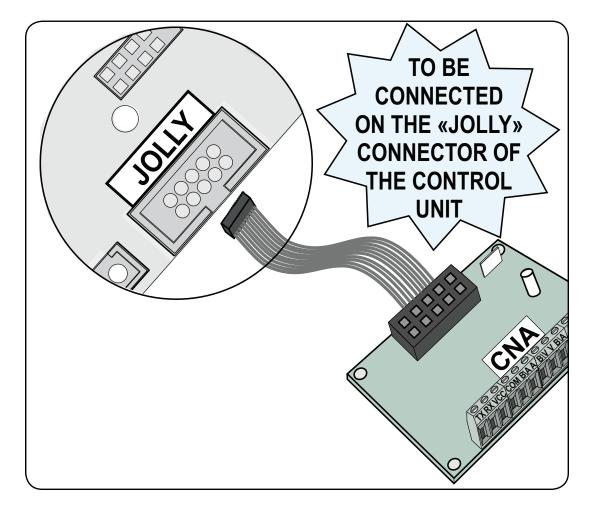


Connections MINI SEA CLOUD UNI IOT



PHASE 1

1.3


MAKE CONNECTIONS (PLUG-IN) BETWEEN MINI SEACLOUD UNI IOT AND CONTROL BOARD

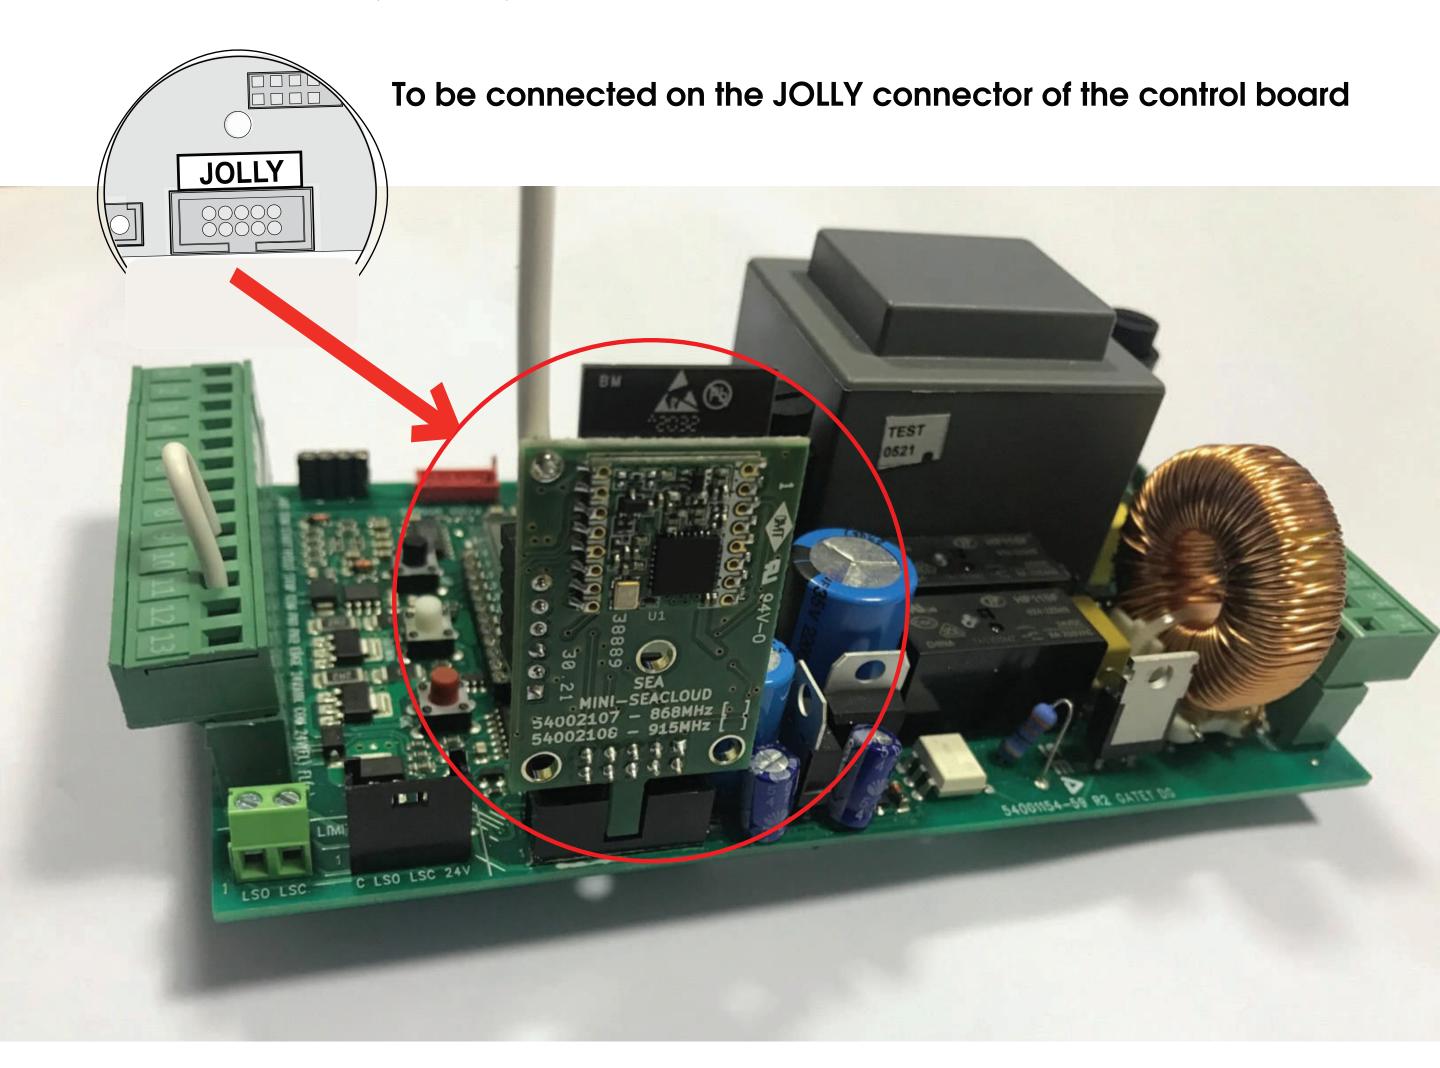


Installer Guide

Are you a new Installer?

Visit www.seacloud.pro an click on the box to register and request access.

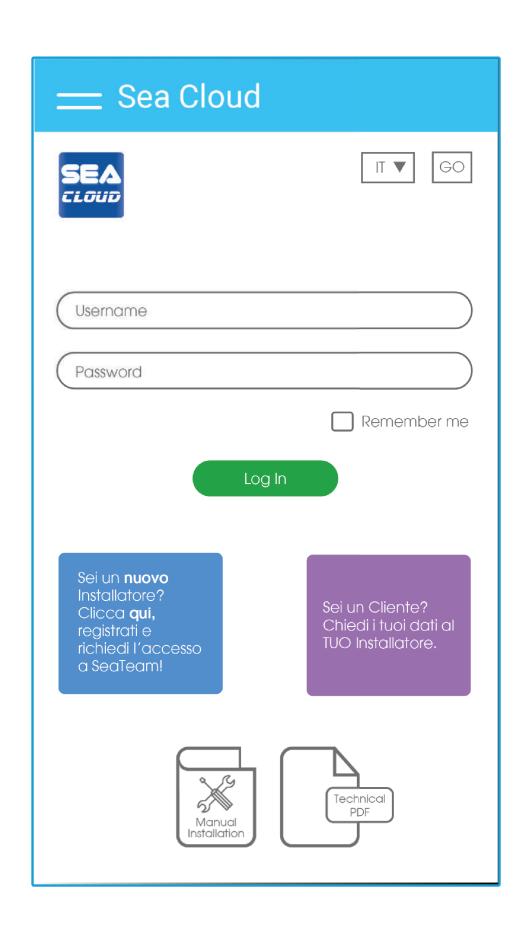

You will receive an email from SEA with your user name and password. Enter them. Now request a new device:

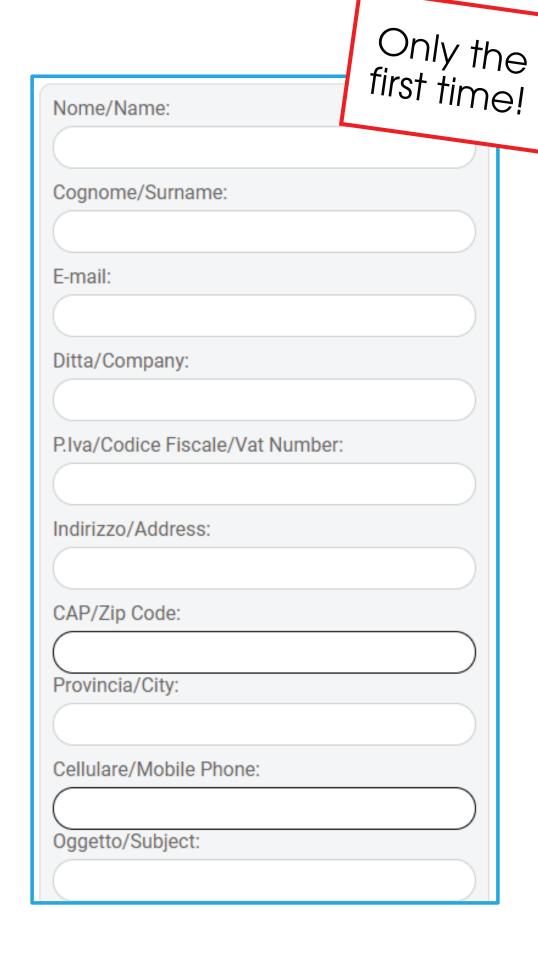





Fill in the form, you can find the MAC address here:





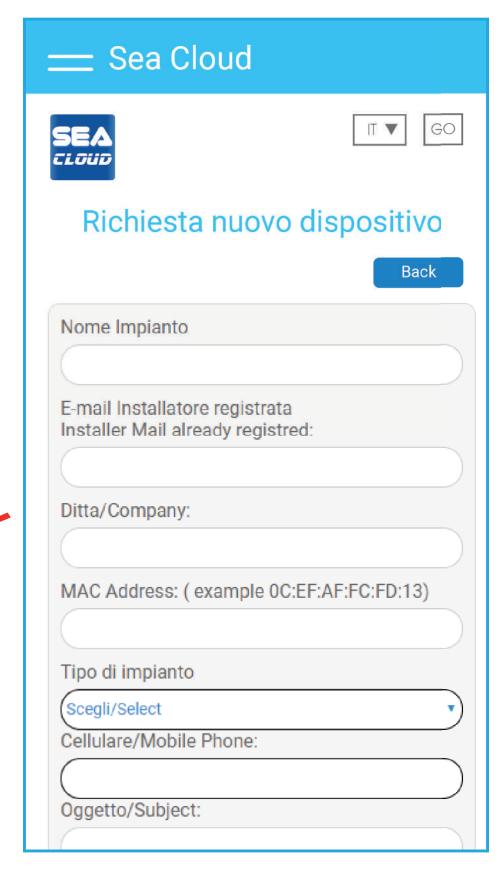

You will receive a confirmation email by SEA.
After that your device is available into the list of your Sites.

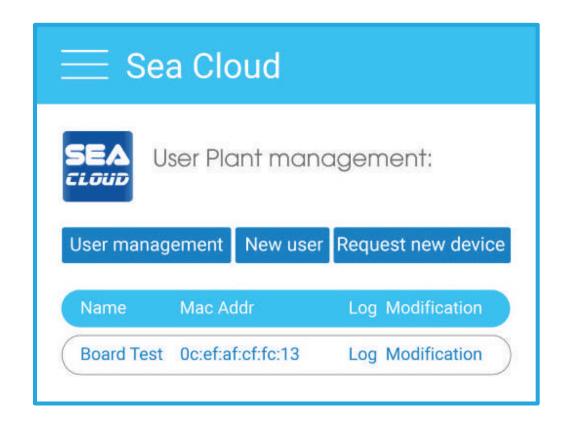

Now, it's time to connect the router to the gate, choose the method you prefer:

1 Cavo LAN

2 Powerline Adapter

3


Each type of configuration can be performed by any type of device.

LAN Cable configuration (only for SEA CLOUD)

If your home router has DHCP enabled, just connect the Ethernet cable to the LAN socket.

Connect the router to the socket and wait that the light becomes fixed.


Didn't you connect the LAN cable to the router? You can do it through a Powerline Adapter!

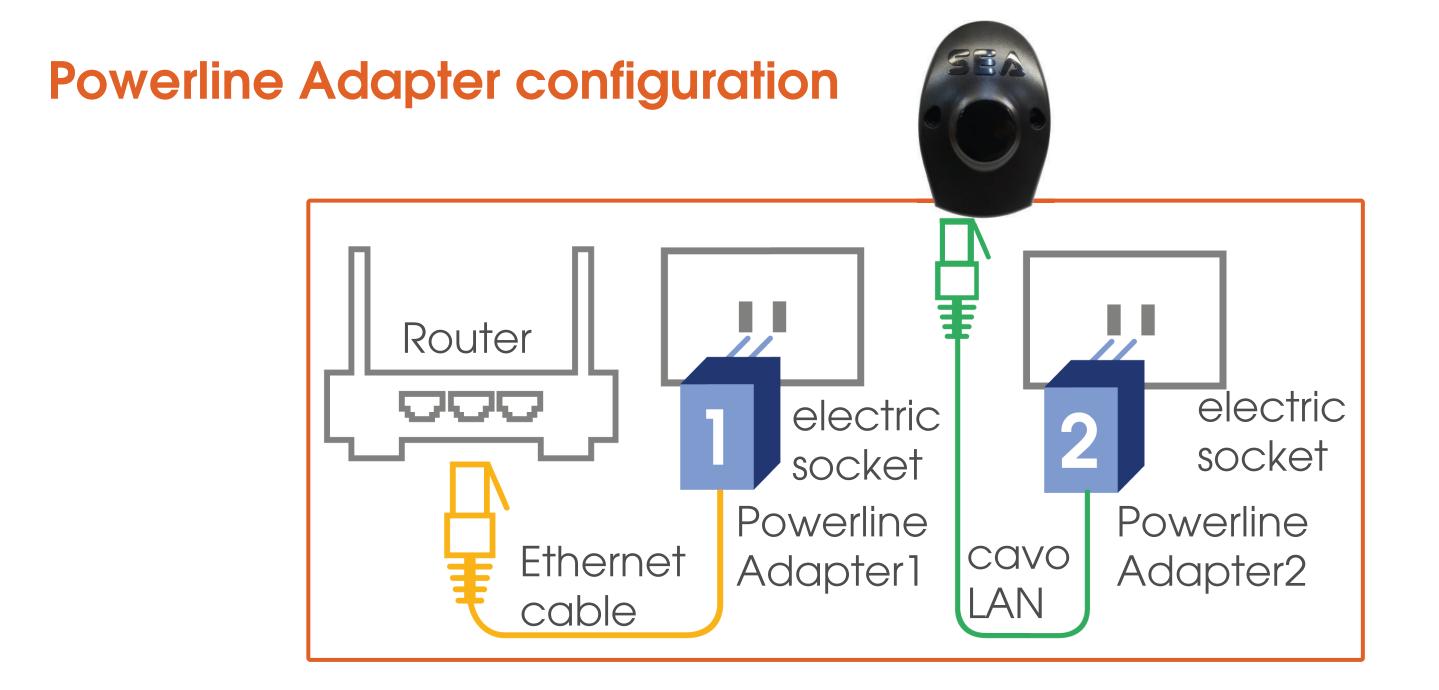


Connect the LAN cable into LAN entry of the router.

Wi-Fi configuration

- 1. User your phone or PC, to find Wi-FI network of Wi-FI del SEA Cloud UNI IOT **SEA XXXXXX** (SEA MAC ADDRESS of SEA Cloud UNI IOT device)
- 2. Enter into Wi-Fi of the device and insert the password seacloud
- 3. Open any browser, write the IP: 192.168.4.1 and press ENTER

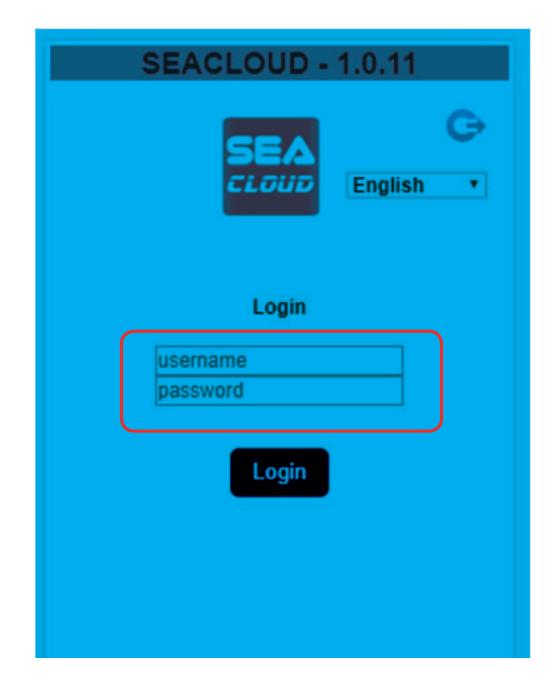

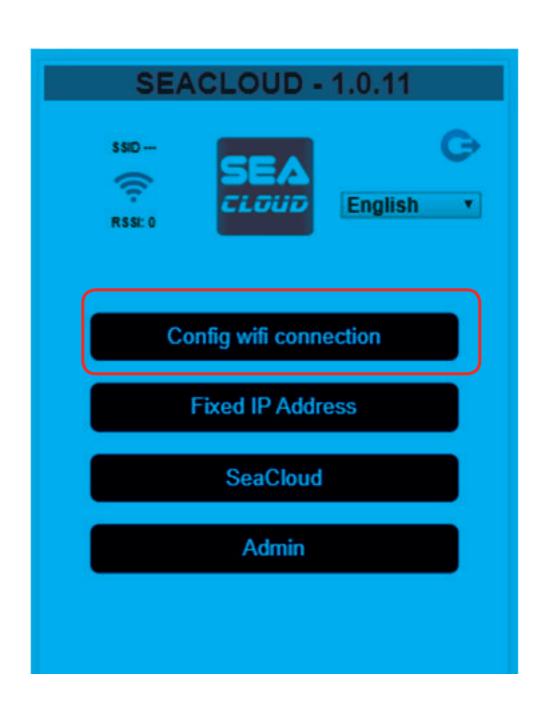


Enter the following default credentials and press ENTER


(the password can be changed later):

Ùsername: admin Password: admin


Choose your Wi Fi network and enter the password

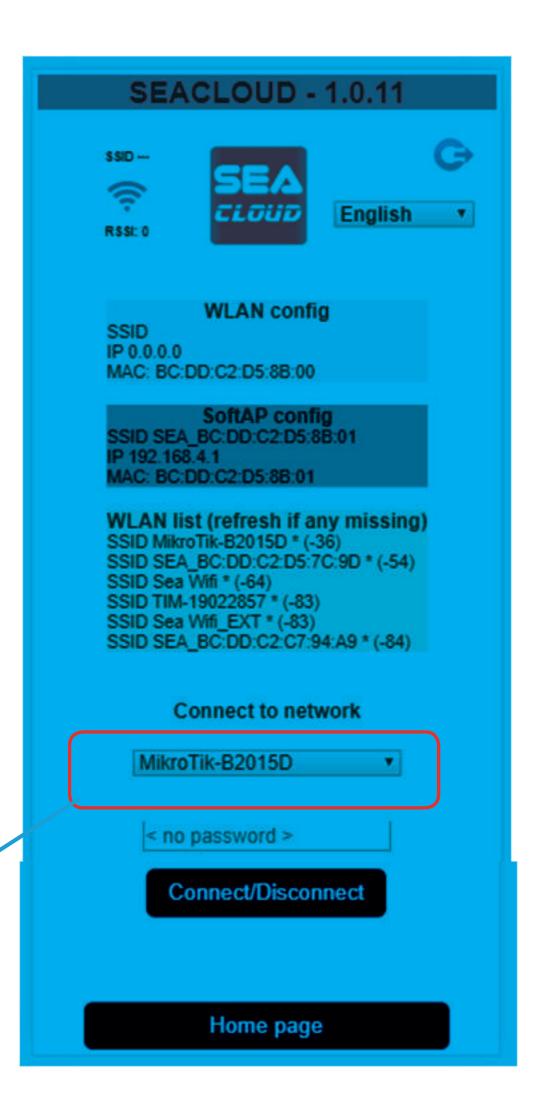


STATIC IP CONFIGURATION (only for SEACLOUD)

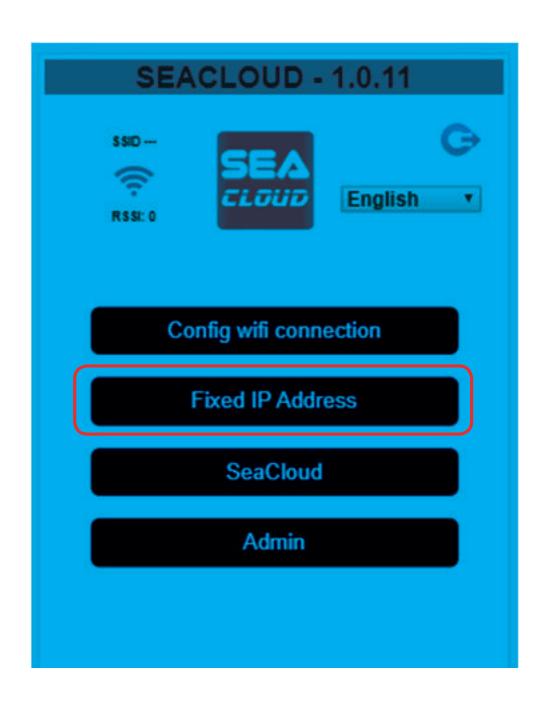


Enter your data

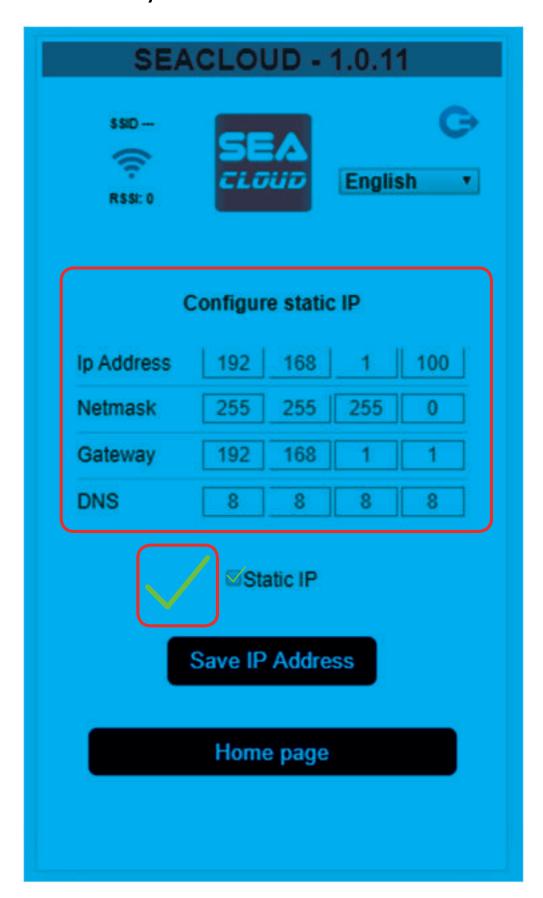


Change "Administrator Password"

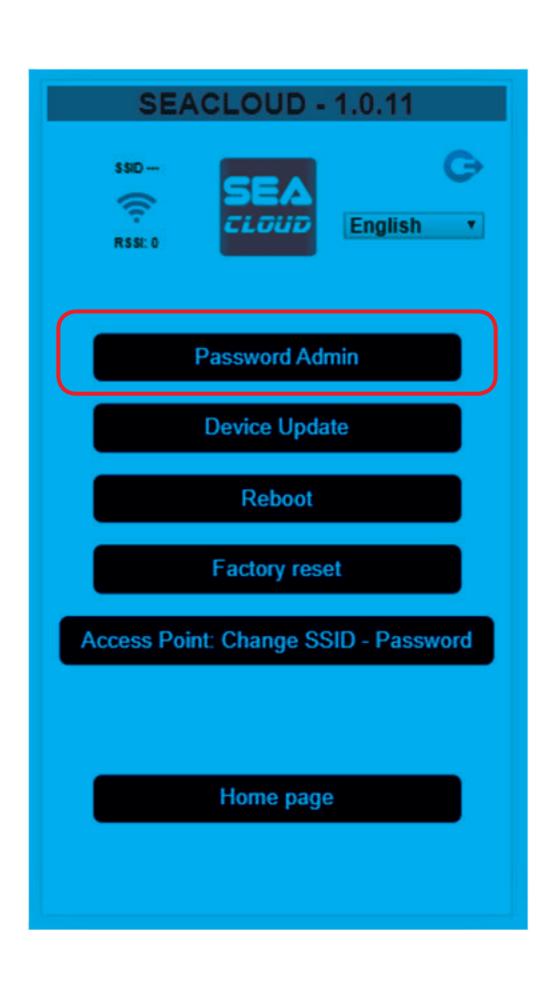

Password di default : admin Change your password

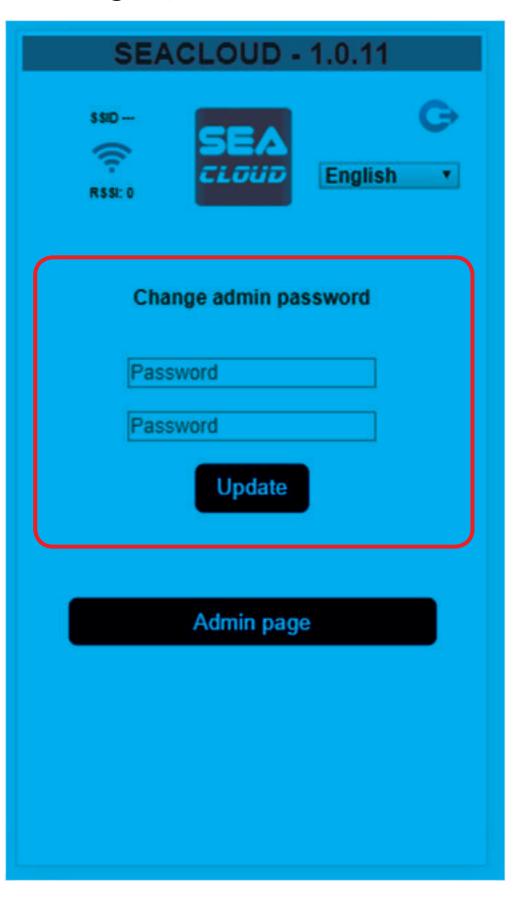


Devise Update

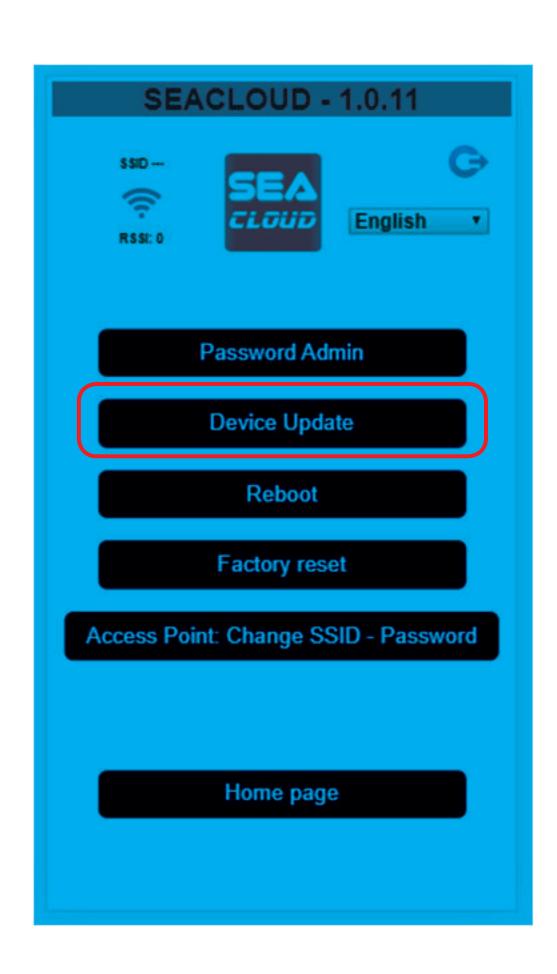

Update OTA of device




Restart

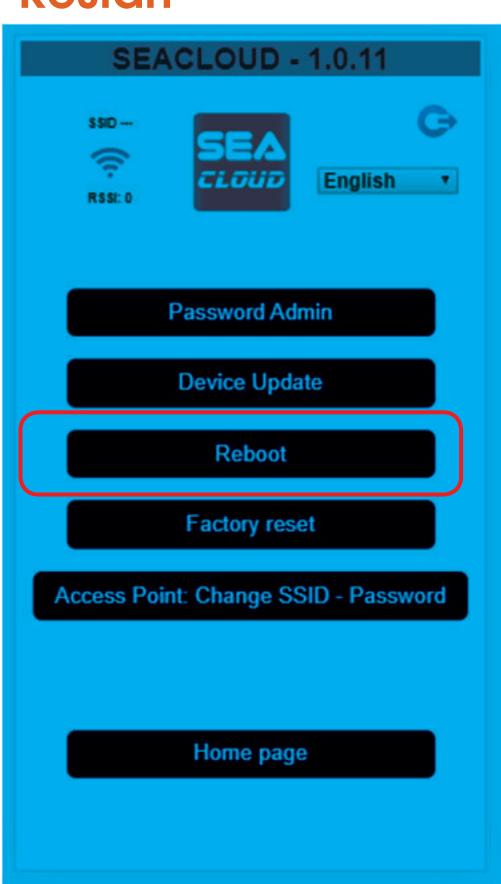


Reboot your device




Factory Reset

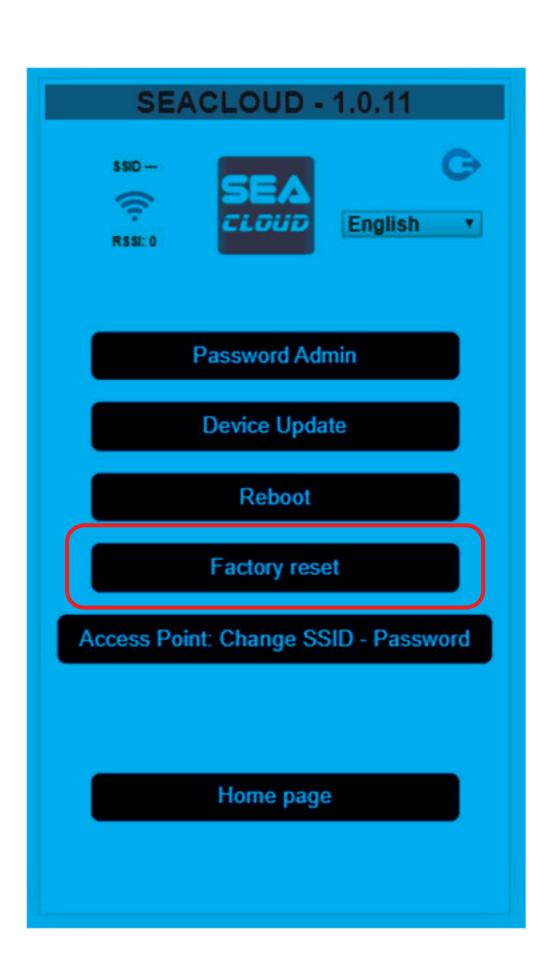


Factory reset, cancellation of all settings

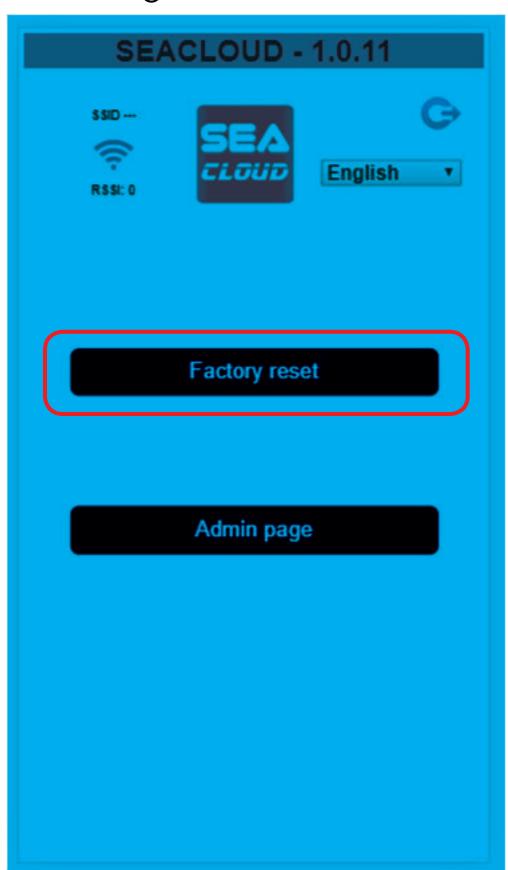

Access Point change SSID - password

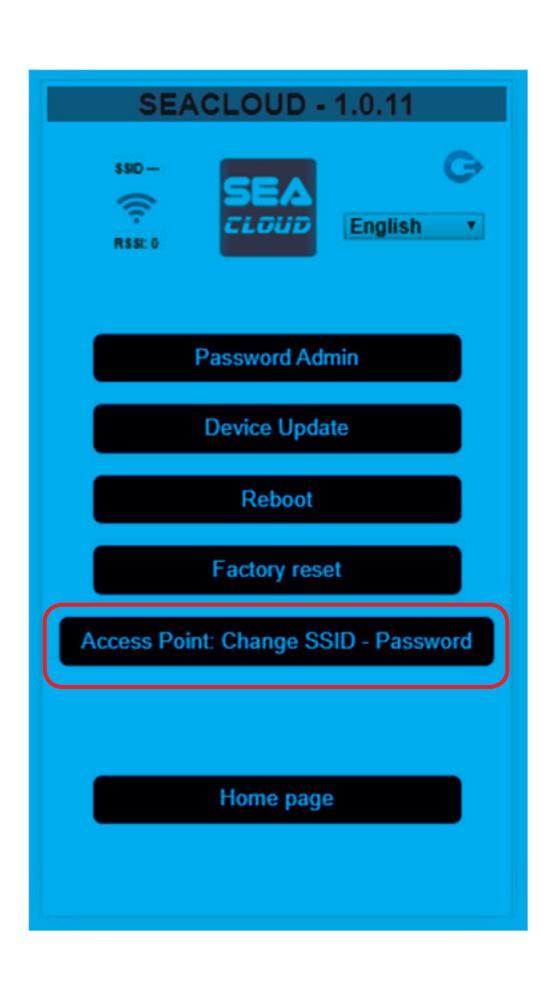

Rename the device's WI FI access point

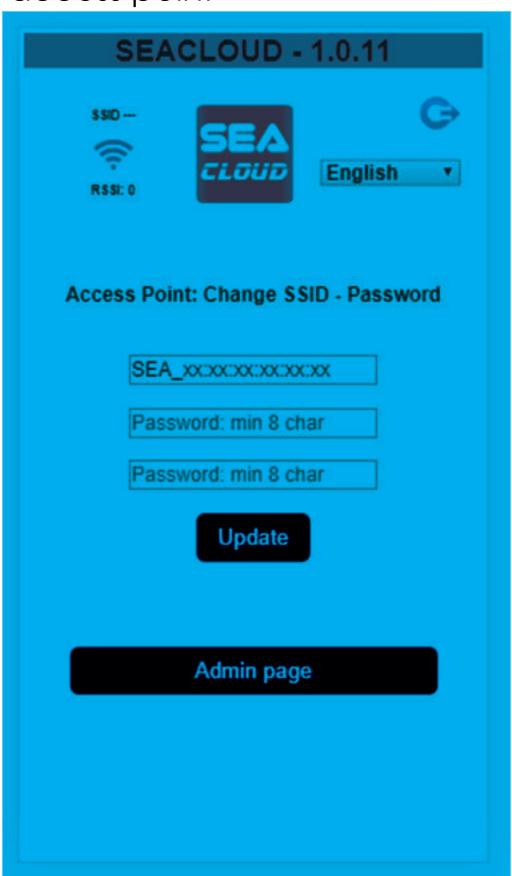

Now you can enter into the Sea Cloud APP and manage your devices.


Download the l'APP Sea Cloud on the Google Play or Apple Store.






SEA Cloud

Enter all data of your end users

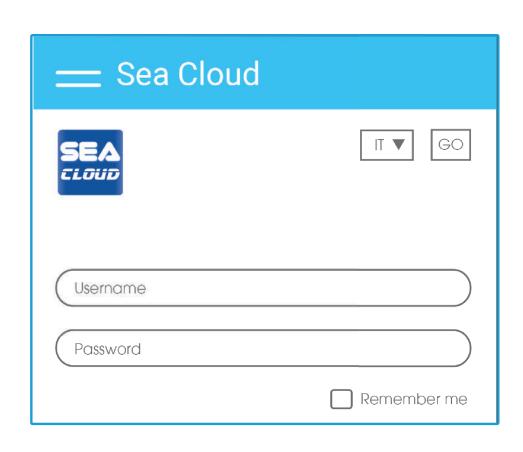

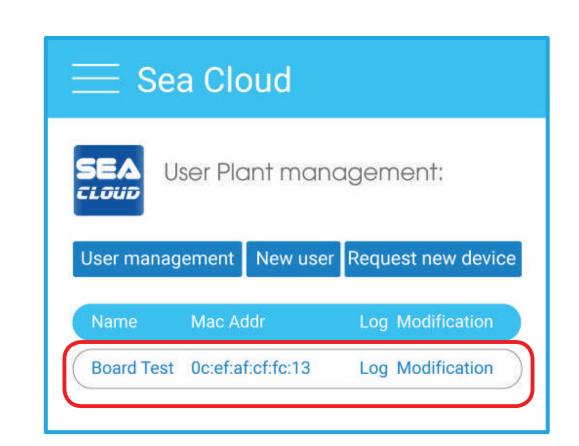

Click on your device to manage your Control Board:




Compatible with control units with revision Firmware 2.0 and later


you can scroll down the entire menù or text the number of the menù that you want in the search bar

Do you want to associate your Clients to your site?

In this way they can open their gates wherever they are!
Simply from their smartphone.


Click on "User management" and on "New user"

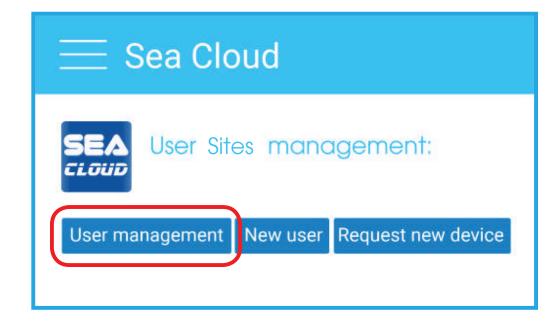

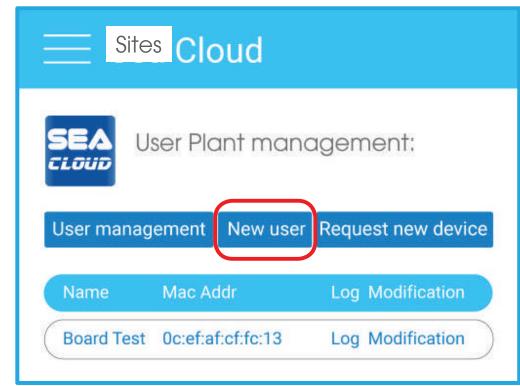


Enter all data of your end users

and their profile are created.

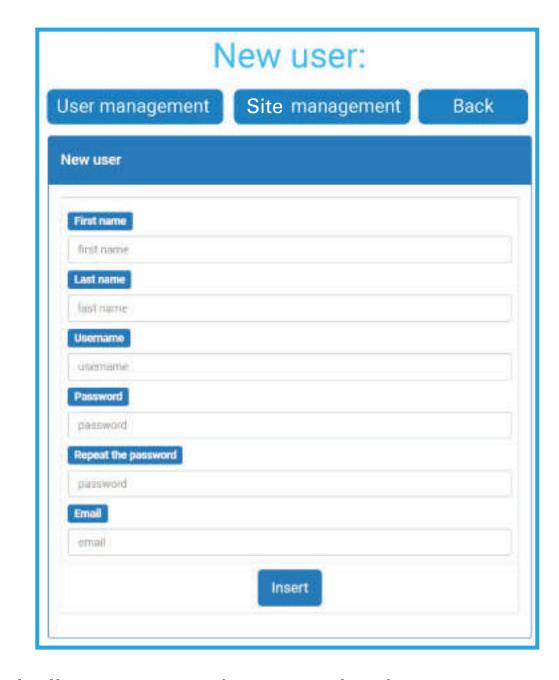

Click on "+" to associate the end user to his/her remote control

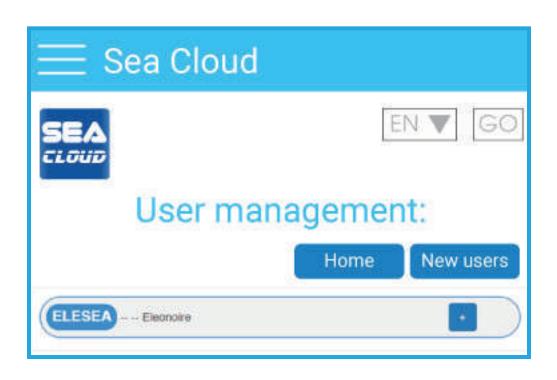



Provide username and password that you choose to your end user.

Guida per l'utente finale

Download the Sea Cloud APP from






This is the remote control of your automations!



Enter the username and password provided by your installer



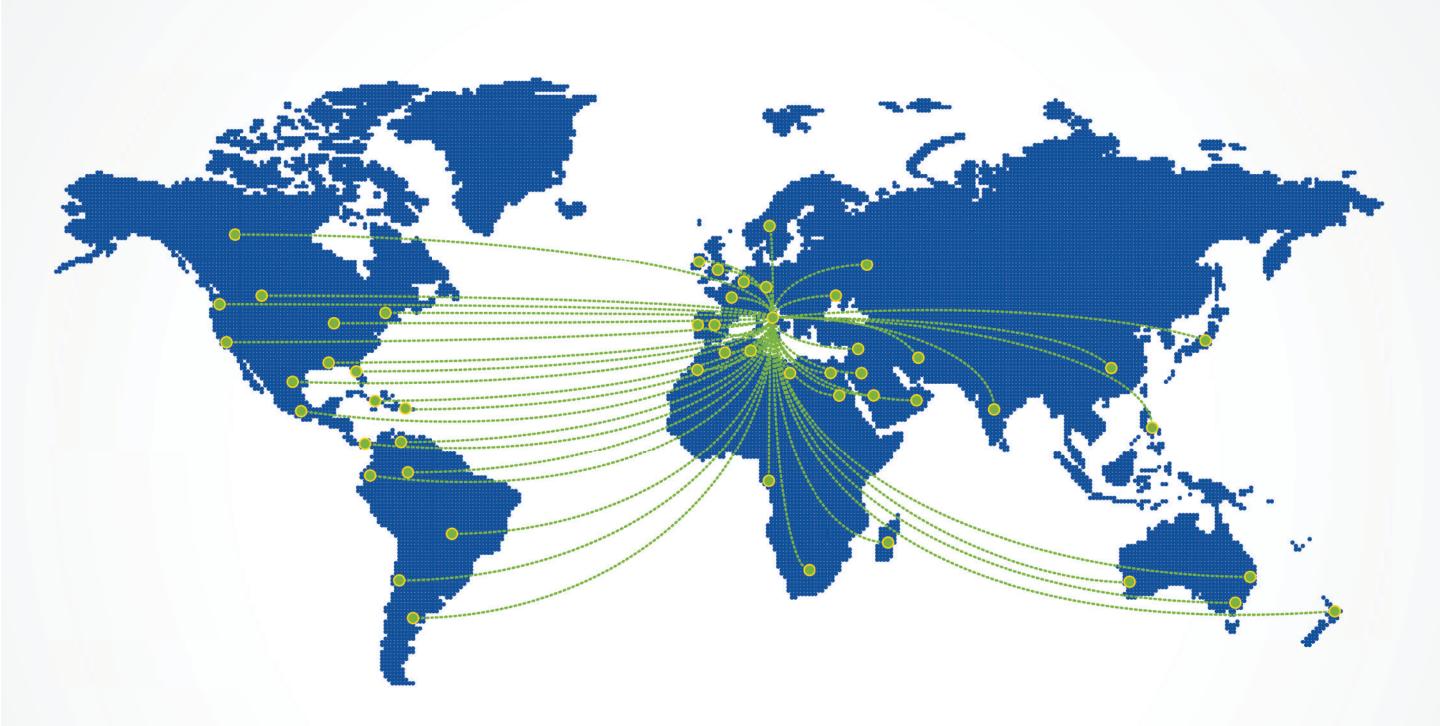











HEADQUARTER

SEA S.p.A. Z.I. S. Atto

64100 Teramo - Italy Phone: +39 0861 588341 info@seateam.com www.seateam.com

SEA SUBSIDIARIES

SEA USA, Inc.

10850 N.W.21st Street unit 160 4 Rue Paul Villard 33172 Miami - Florida (USA) Phone ++1-305.594.1151 sales@sea-usa.com www.sea-usa.com

SEA Automatismes France SARL

69680 Chassieu - France Phone: +33 472814245 info@seafrance-automatismes.fr www.seafrance-automatismes.fr