


Step One

- > Dig the hole
- > Align & level the Slab

Addition materials needed:
100x100 SHS Guide Post
0.35 m3 of concrete
Reo mesh 1000x400

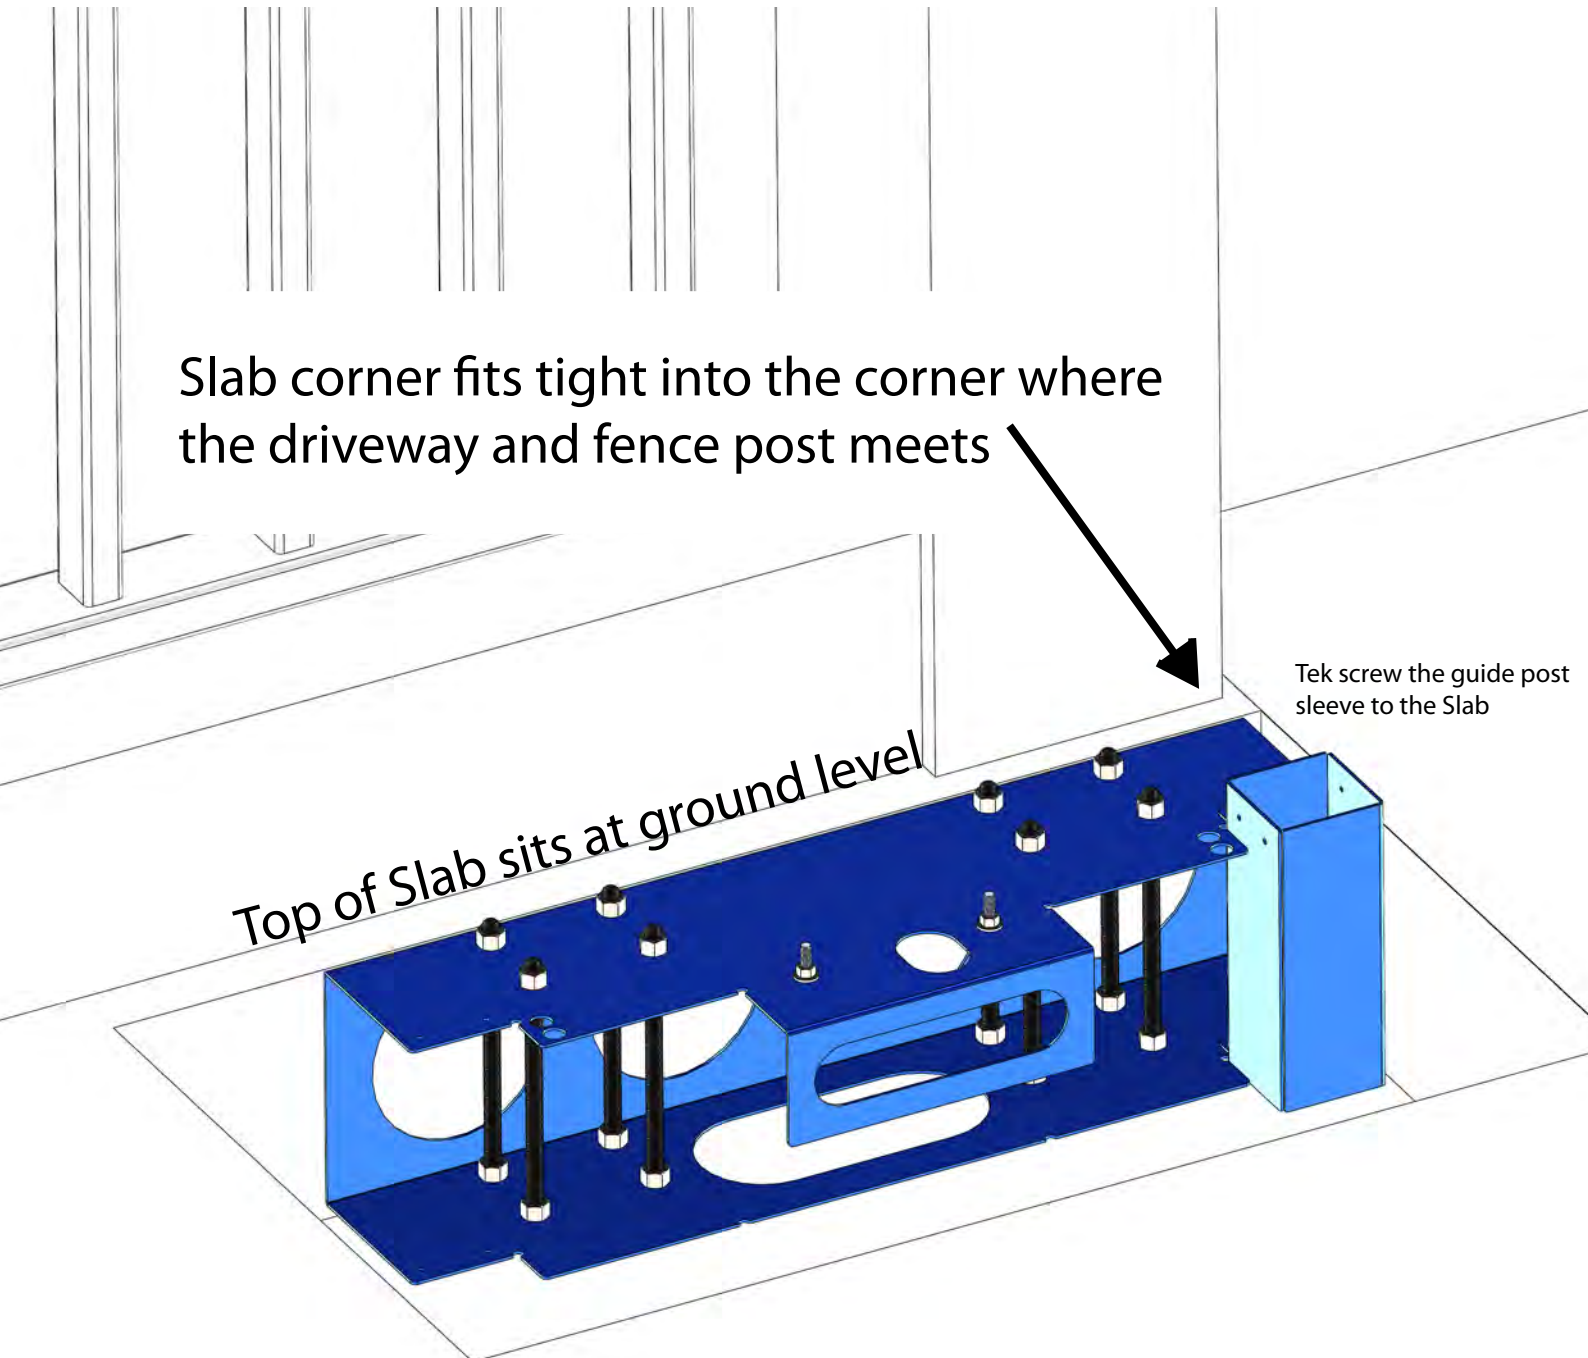



Hole size: 500Wide, 500Deep, 1200Long

IMPORTANT: Ensure Slab is level before concrete pour

Step Two

> Attach the reo to the Slab

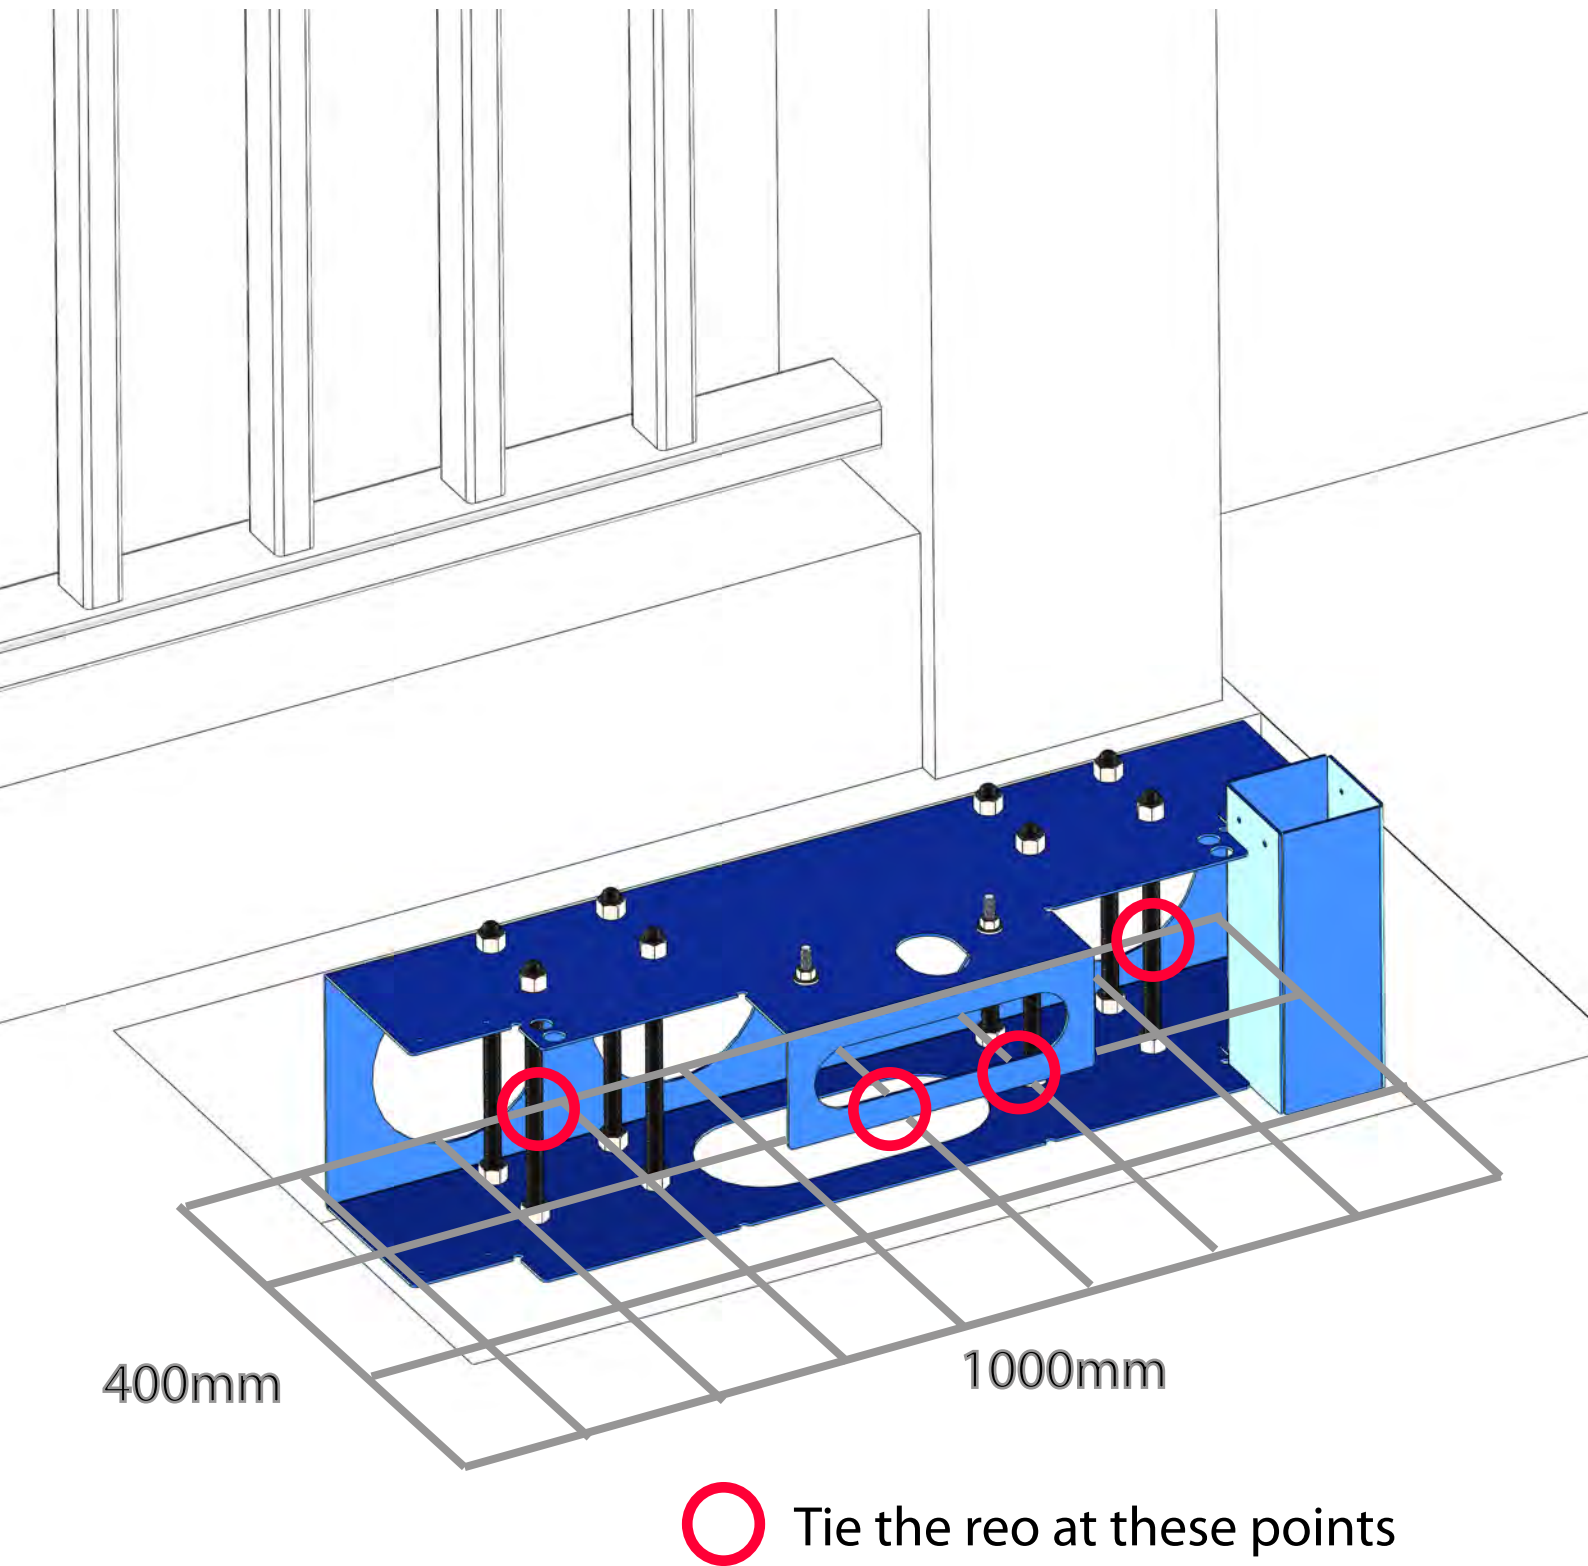


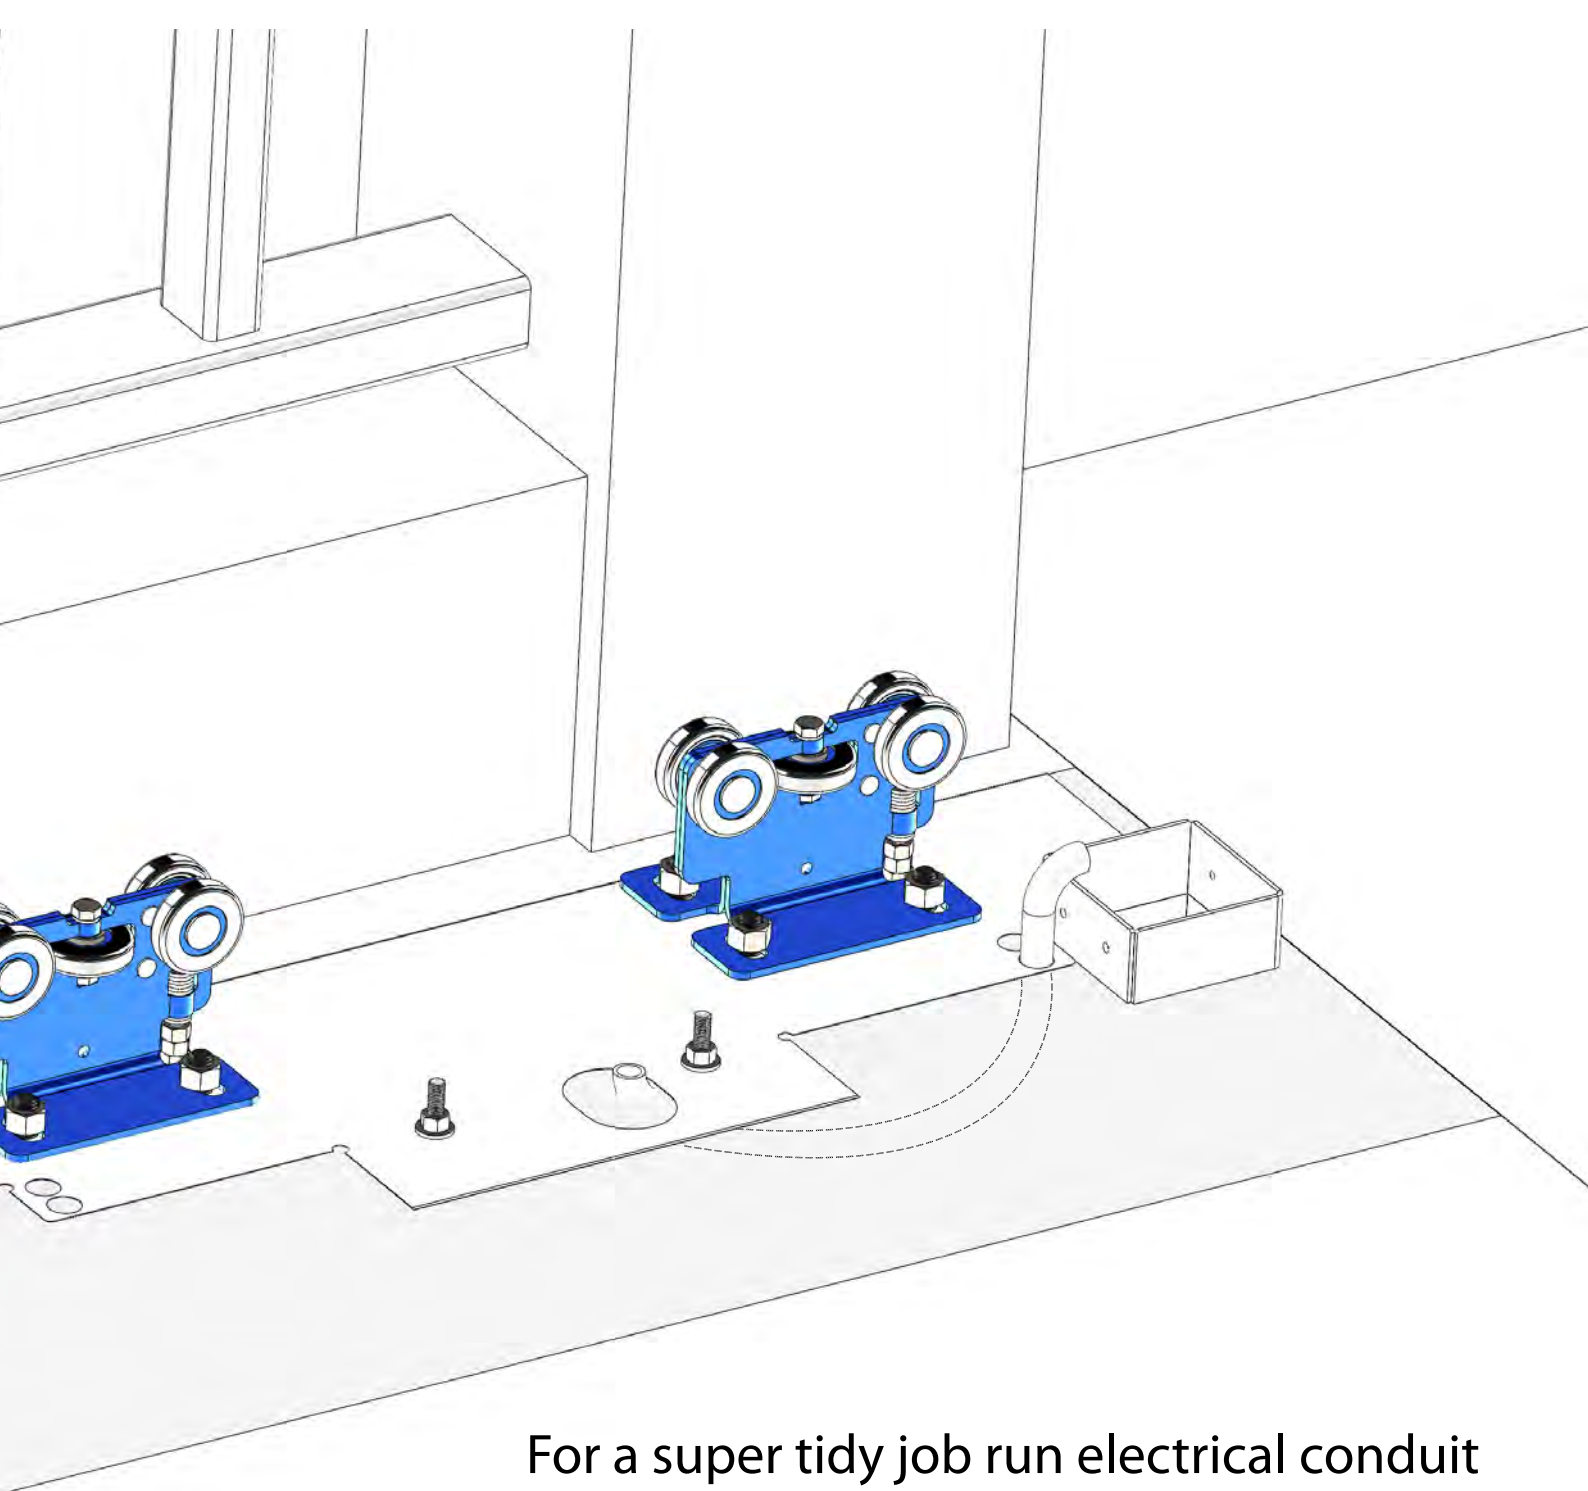

For a super tidy job run electrical conduit
before pouring concrete

Step Four

- > Bolt the Lift Plate to the Slab
- > Mount the motor to the Lift Plate
- > Tek screw the 100x100 guide post into the sleeve
- > Mount suitable guide rollers
- > The gate is now ready to be fitted

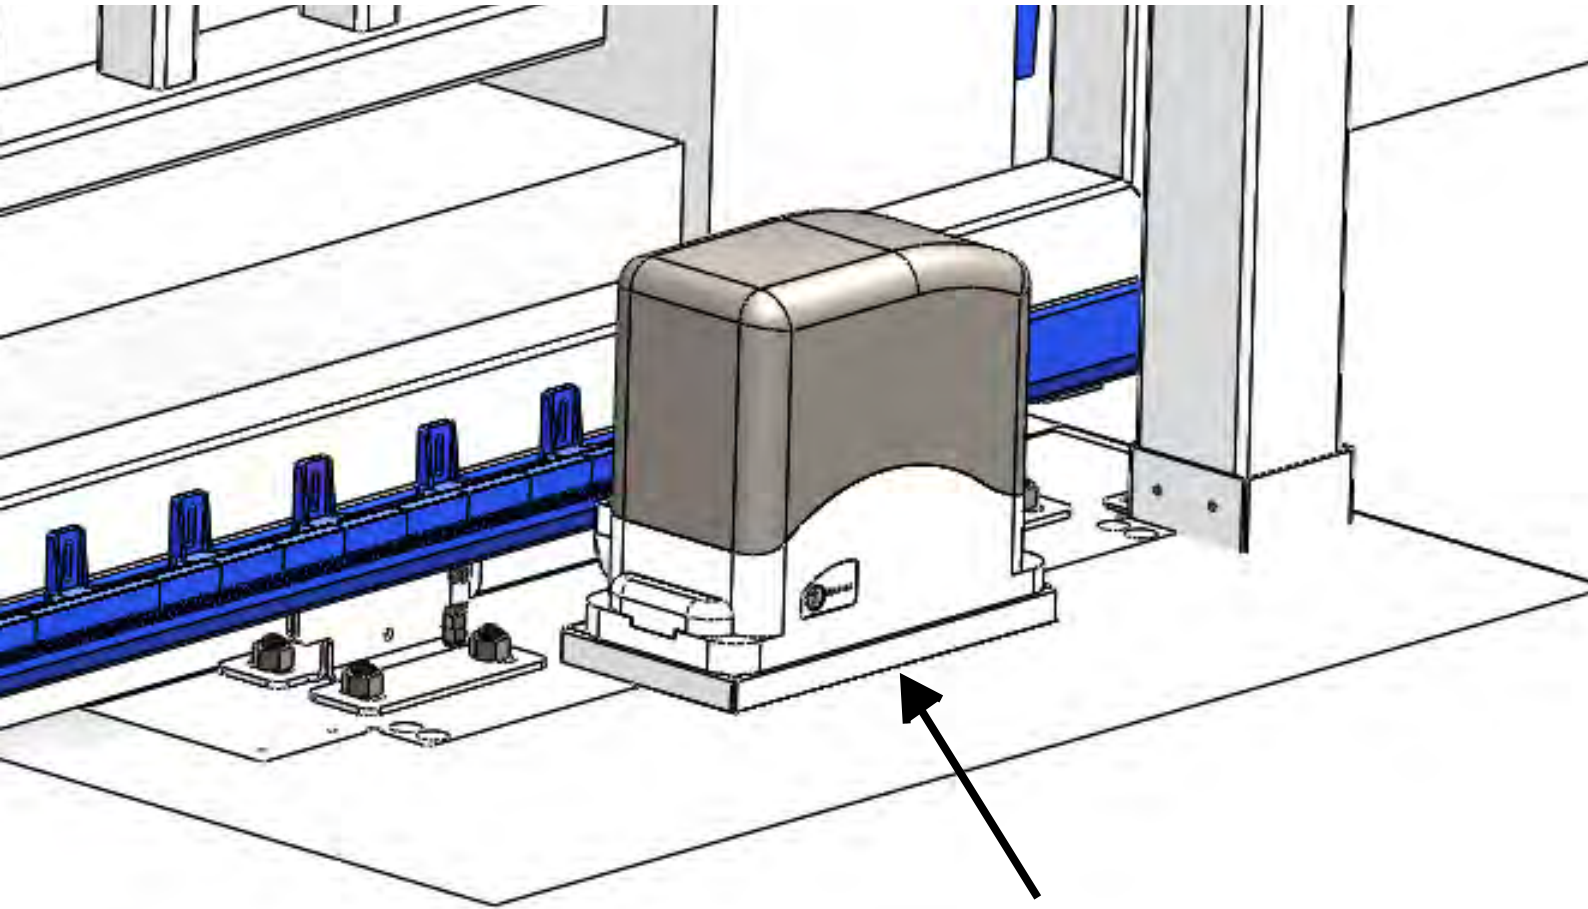

Attach the motor Lift Plate on Slab
then mount motor on Lift Plate.